


Stained Glass News


Project Pattern Issue #61

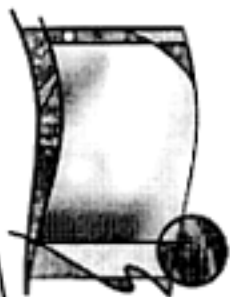

Abstract Mirror

Materials

You will probably want to enlarge this pattern so you may want to have your supplier help you figure out how much of each glass color you need.

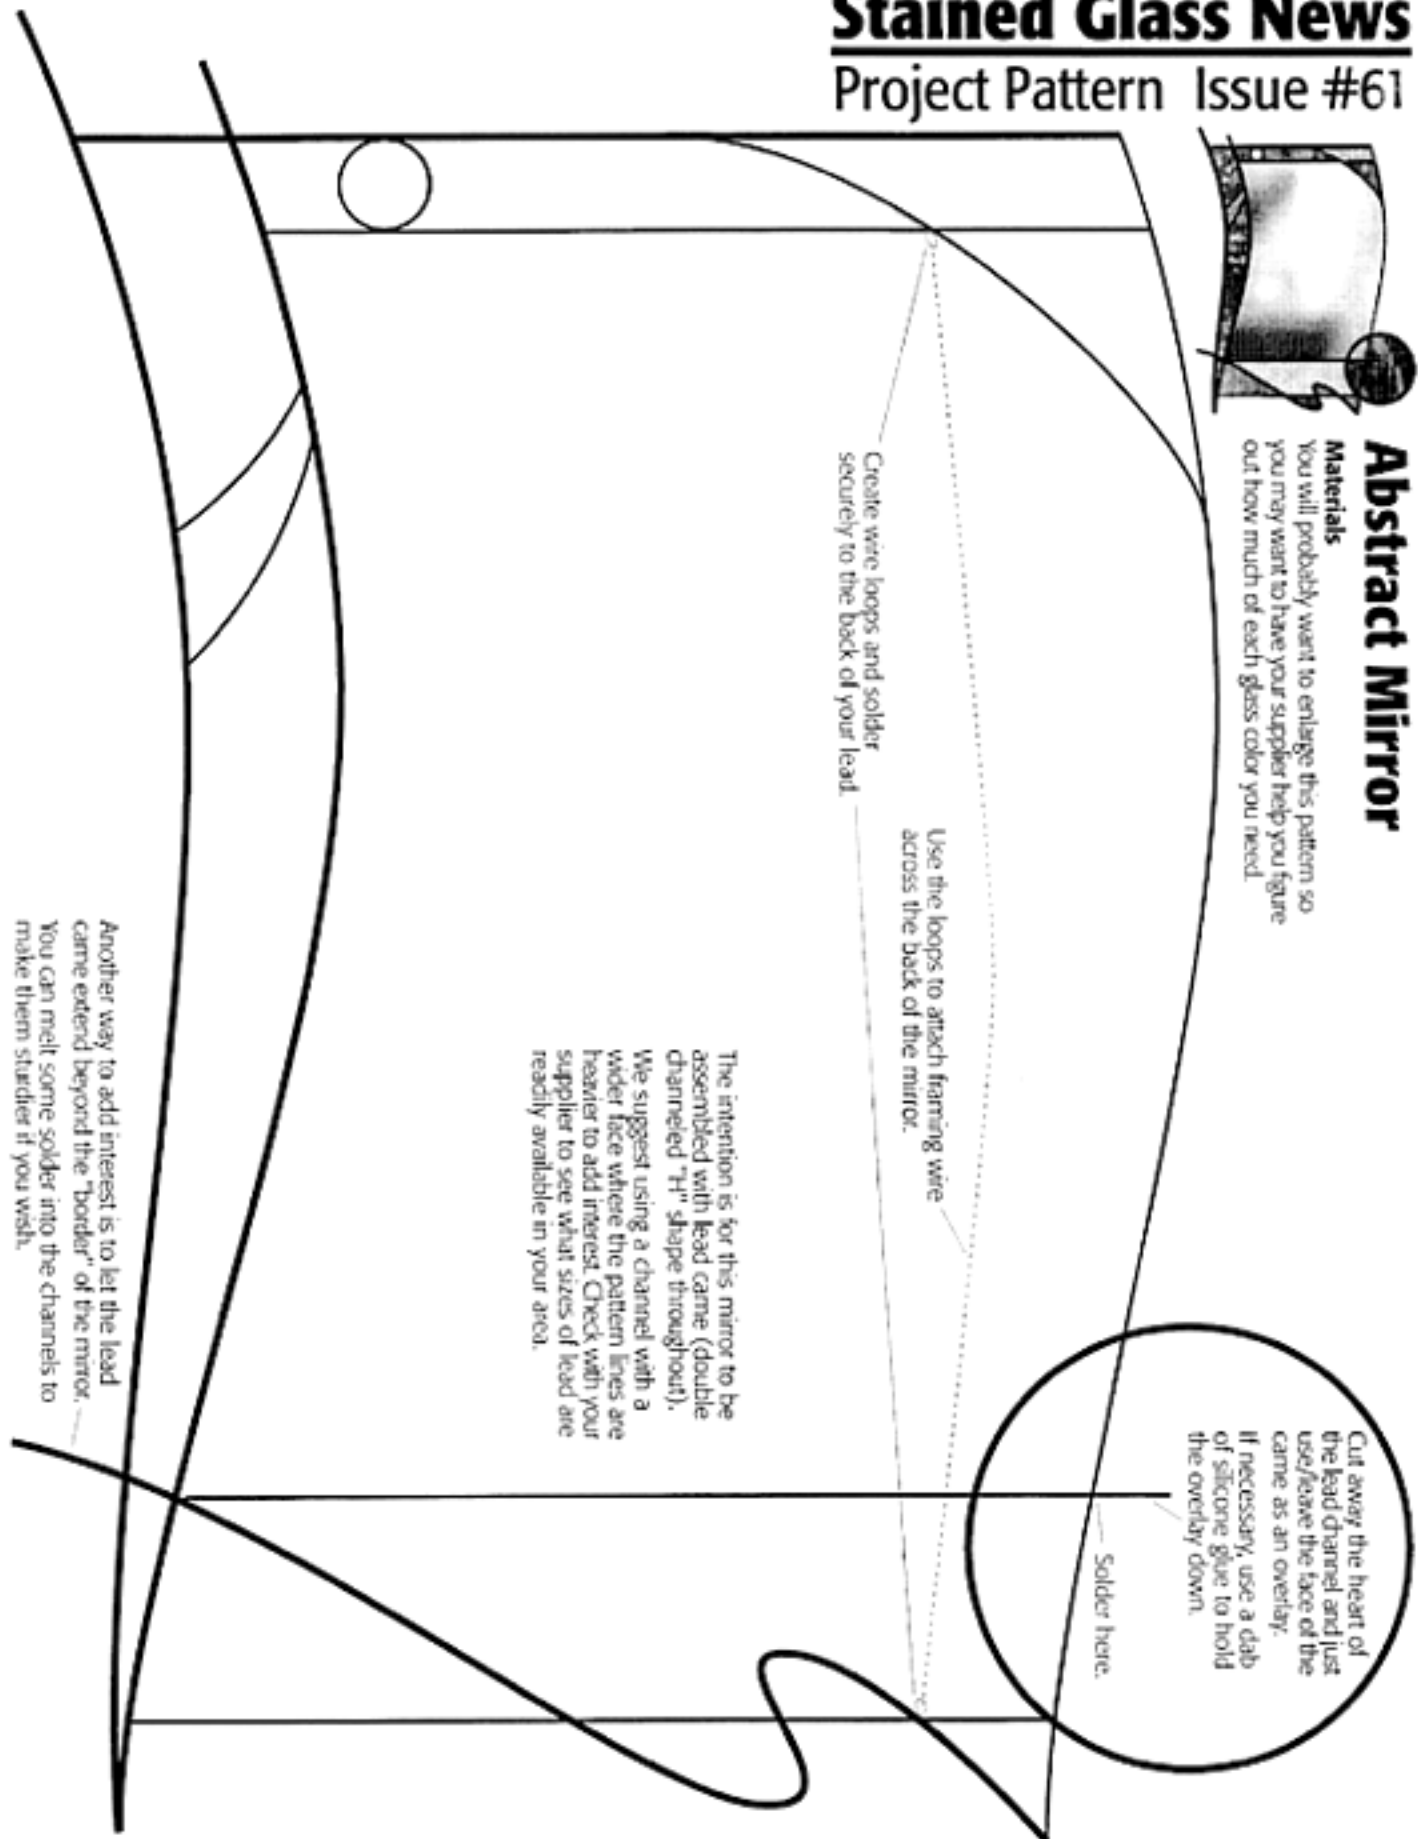

Create wire loops and solder securely to the back of your lead.

Use the loops to attach furring wire across the back of the mirror.

Solder here.

Cut away the heart of the lead channel and just use/leave the face of the came as an overlay. If necessary, use a dab of silicone glue to hold the overlay down.

The intention is for this mirror to be assembled with lead came (double channelled "H" shape throughout). We suggest using a channel with a wider face where the pattern lines are heavier to add interest. Check with your supplier to see what sizes of lead are readily available in your area.

Another way to add interest is to let the lead came extend beyond the "border" of the mirror. You can melt some solder into the channels to make them sturdier if you wish.